


# ROGUE™

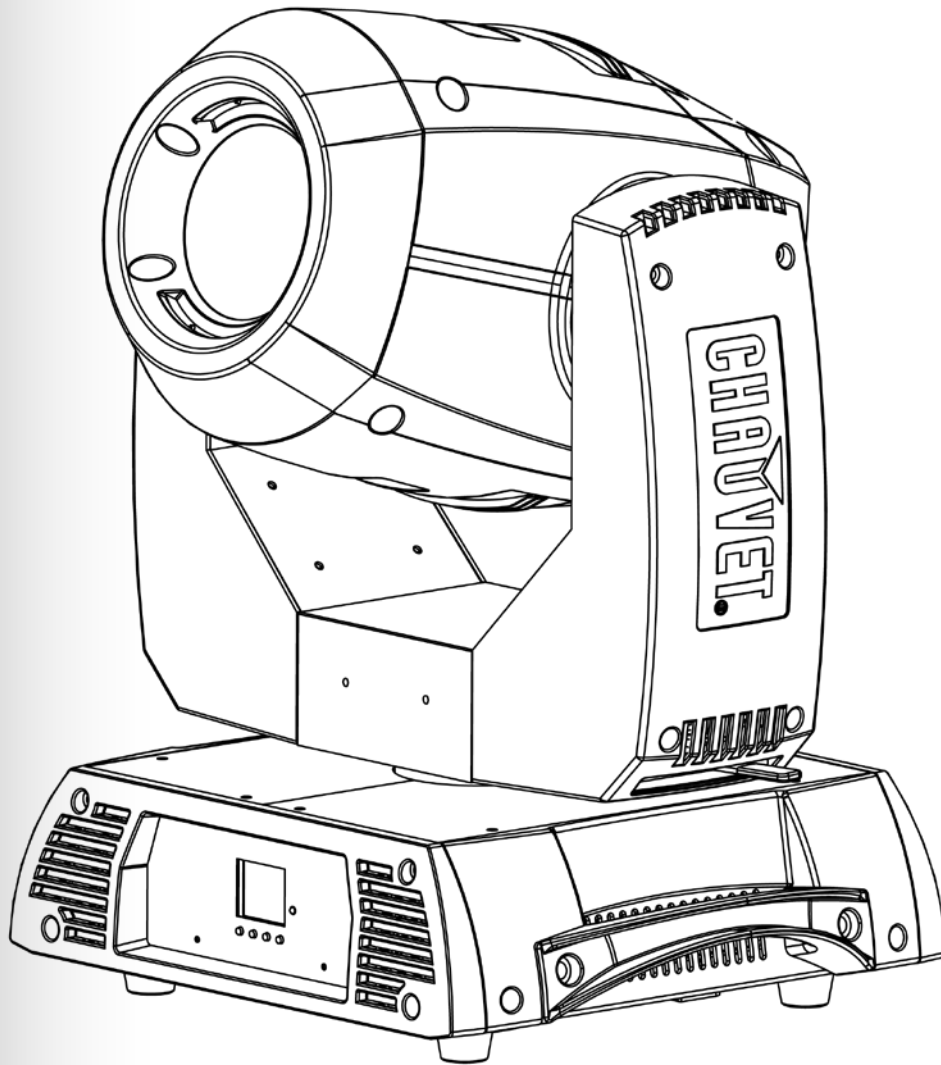

## User Manual



**CHAUVET®**  
PROFESSIONAL  
It's **Green** Thinking.

**Edition Notes** The Rogue™ R1 Spot User Manual Rev. 4 covers the description, safety precautions, installation, programming, operation, and maintenance of the Rogue™ R1 Spot. CHAUVET® released this edition of the Rogue™ R1 Spot User Manual in July 2014.

**Trademarks** CHAUVET® is a registered trademark of CHAUVET & Sons Inc. (d/b/a CHAUVET® or Chauvet). The CHAUVET® logo in its entirety including the CHAUVET® name and the dotted triangle, and all other trademarks in this manual pertaining to services, products, or marketing statements (example: It's Green Thinking™) are owned or licensed by CHAUVET®. Any other product names, logos, brands, company names, and other trademarks featured or referred to within this document are the property of their respective trademark holders.

**Copyright Notice** CHAUVET® owns the content of this User Manual in its entirety, including but not limited to pictures, logos, trademarks, and resources.

© Copyright 2014 CHAUVET®. All rights reserved.

Electronically published by CHAUVET® in the United States of America.

**Manual Use** CHAUVET® authorizes its customers to download and print this manual for professional information purposes only. CHAUVET® expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from CHAUVET®.

**Document Printing** For better results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

**Intended Audience** Any person in charge of installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

**Disclaimer** CHAUVET® believes that the information contained in this manual is accurate in all respects. However, CHAUVET® assumes no responsibility for any errors or omissions in this document. CHAUVET® reserves the right to revise and make changes to the content of this document without obligation that CHAUVET® notify any person or company of such revision or changes. This does not in any way constitute a commitment by CHAUVET® to make such changes. CHAUVET® may issue a revision of this manual or a new edition to incorporate such changes.

**Document Revision** The Rogue™ R1 Spot User Manual Rev. 4 supersedes all previous versions of this manual. Discard any older versions of this manual and replace with this version. Go to [www.chauvetprofessional.com](http://www.chauvetprofessional.com) for the latest version.

Author	Date	Editor	Date
D. Coupe	7/15/14	A. Leon	7/15/14

# Table of Contents

<b>1. Before You Begin .....</b>	<b>1</b>
What Is Included .....	1
Claims .....	1
Manual Conventions .....	1
Symbols .....	1
Product At A Glance .....	2
Safety Notes .....	2
Personal Safety .....	2
Mounting And Rigging .....	2
Power And Wiring .....	2
Operation .....	2
<b>2. Introduction .....</b>	<b>3</b>
Description .....	3
Features .....	3
Overview .....	4
Dimensions .....	5
<b>3. Setup .....</b>	<b>6</b>
AC Power .....	6
AC Plug .....	6
Fuse Replacement .....	6
Power Linking .....	6
DMX Linking .....	6
DMX Personalities .....	6
Gobo Wheel .....	7
Color Wheel .....	8
Mounting .....	9
Orientation .....	9
Rigging .....	9
Procedure .....	9
<b>4. Operation .....</b>	<b>10</b>
Control Panel Description .....	10
Control Options .....	10
Programming .....	10
Menu Map .....	11
Menu Map (Cont.) .....	12
Address .....	13
Set the DMX Address .....	13
Run Mode .....	13
DMX Personality .....	13
Auto Test .....	13
Manual Test .....	13
Setup .....	14
Pan Reverse .....	14
Tilt Reverse .....	14
Screen Reverse .....	14
Pan Angle .....	14
Tilt Angle .....	14
Pan and Tilt Movement BlackOut .....	14
Color Movement BlackOut .....	14
Gobo Movement BlackOut .....	14
Reset Function .....	15
Factory Reset Function .....	15
System Information .....	16

Offset Mode .....	16
Pan.....	16
Tilt .....	16
Gobo .....	16
Gobo Rotate.....	16
Gobo 2 .....	16
Color 1 .....	16
Color 2 .....	16
Prism.....	16
Focus .....	16
Iris .....	16
Frost.....	16
Dimmer .....	16
FO. Yellow Edge .....	16
DMX Values .....	17
DMX Values (Cont.).....	18
DMX Values (Cont.).....	19
DMX Values (Cont.).....	20
DMX Values (Cont.).....	21
DMX Values (Cont.).....	22
<b>5. Technical Information .....</b>	<b>23</b>
Product Maintenance.....	23
<b>6. Technical Specifications.....</b>	<b>24</b>
Returns .....	25
<b>Contact Us.....</b>	<b>25</b>

# 1. BEFORE YOU BEGIN

- What Is Included**
- Rogue™ R1 Spot
  - Neutrik® powerCON® power cord
  - 2 Omega brackets with mounting hardware
  - Warranty Card
  - Quick Reference Guide

**Claims** Carefully unpack the product immediately and check the box to make sure all the parts are in the package and are in good condition.




If the box or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not CHAUVET®. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with CHAUVET® within 7 days of delivery.

## Manual Conventions

Convention	Meaning
1–512	A range of values in the text
50/60	A set of mutually exclusive values in the text
<SET>	A button on the product's control panel
Settings	A product function or a menu option
MENU>Settings	A sequence of menu options
1–10	A range of menu values from which to choose in a menu
Yes/No	A set of two mutually exclusive menu options in a menu
ON	A unique value to be entered or selected in a menu

## Symbols

Symbols	Meaning
	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

## Product At A Glance

Use on Dimmer	X	Auto Programs	X
Outdoor Use	X	Auto-Ranging Power Supply	P
Sound-Activated	X	Replaceable Fuse	P
DMX	P	User-Serviceable	X
Master/Slave	X		

## Safety Notes



Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.

**This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained CHAUVET® certified technicians. Do not open the housing or attempt any repairs.**



**All applicable local codes and regulations apply to proper installation of this product.**

## Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect this product from its power source before servicing.
- Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing during operation because it may be very hot.

## Mounting And Rigging

- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- This product weighs 36 lb (16.3 kg). Always ask for help when mounting this product to avoid personal injuries or damage to the product.
- Make sure there are no flammable materials close to this product while it is operating.
- Always carry this product by the handles. Do not carry from the head.
- When hanging this product, always secure to a fastening device using a safety cable.

## Power And Wiring

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

## Operation

- Do not operate this product if you see damage to the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- Do not aim this product toward the Sun. The lenses could concentrate the solar energy and cause internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at a higher temperature.
- In case of a serious operating problem, stop using this product immediately!




**In the unlikely event that your CHAUVET® product may require service, contact CHAUVET® Technical Support.**

## 2. INTRODUCTION

**Description** The Rogue™ R1 Spot is a compact, electronic, moving yoke product equipped with a 140-watt LED. It includes 1 color wheel with 8 colors plus white and 2 gobo wheels for gobo morphing. It also includes a rotating 3-facet prism, remote focus, and iris.


- Features**
- Compact, moving yoke fixture with a prism and motorized focus
  - Precision-designed optics for hard-edged effects
  - Extremely quiet for operation in any situation
  - Color wheel:
    - 8 colors + Open (white)
    - Split/linear colors
    - Rainbow color spin at variable speed
  - Gobo wheel 1:
    - 7 slot-n-lock gobos + Open
    - Indexed, rotating gobo wheel with gobo shake
    - Interchangable
    - Gobo wheel spin at variable speed
  - Gobo wheel 2:
    - 8 gobos + Open
    - Gobo wheel spin at variable speed
  - 3-facet rotating prism
  - DMX channels: 16 or 19
  - Pan: 540°
  - Tilt: 270°
  - Reset over DMX
  - Electronic power supply
  - 3- and 5-pin DMX input and output connectors

## Overview

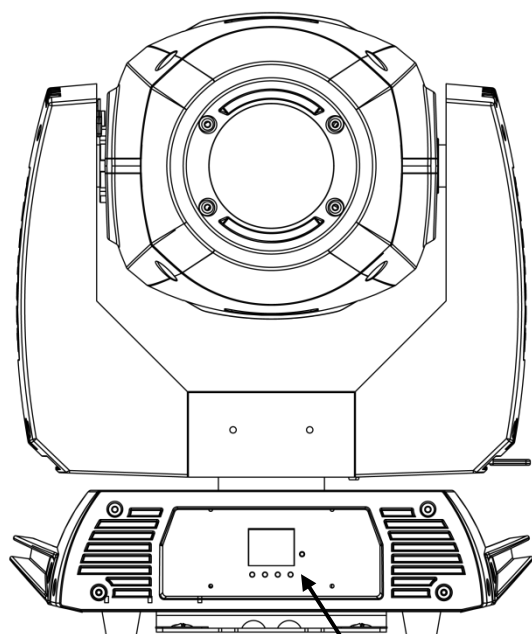


Control Panel


**Front View**

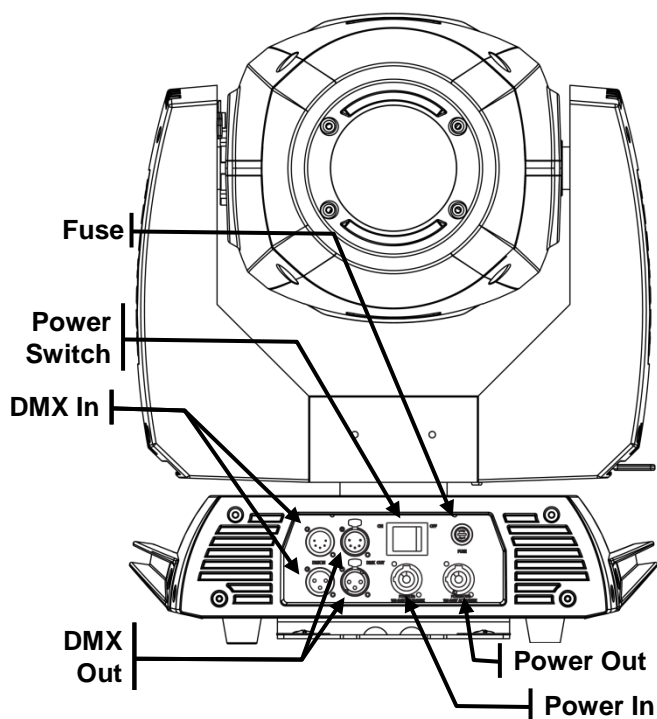

**Rear View**

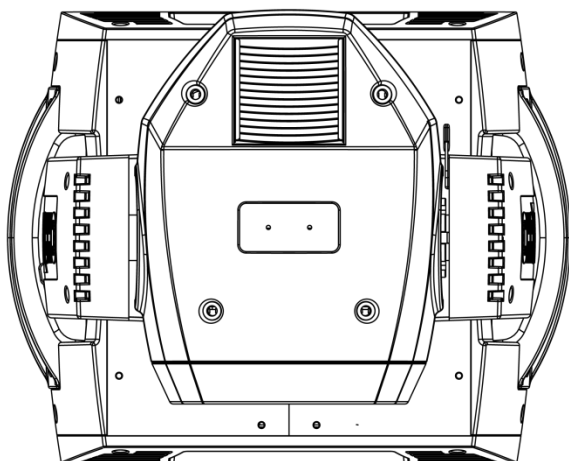



**Top View**

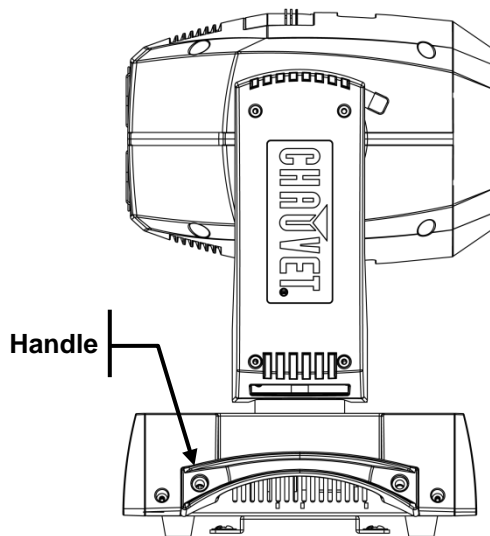

**Side View**



## Dimensions

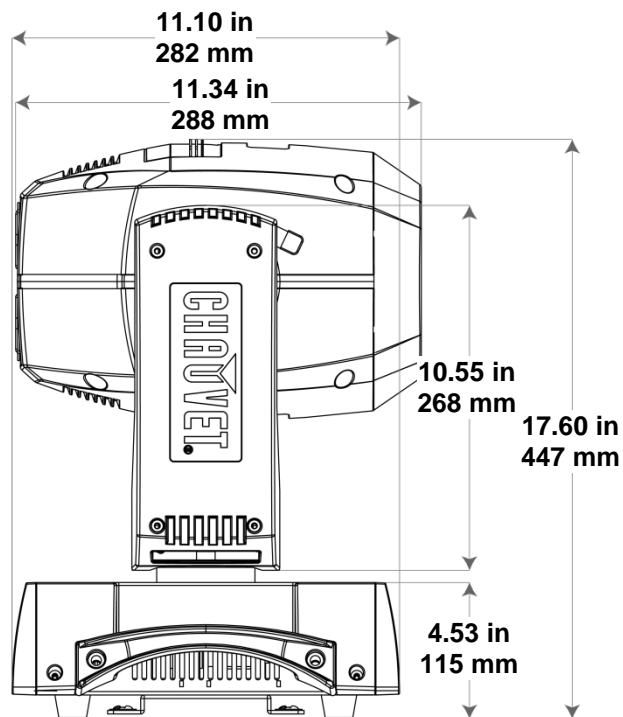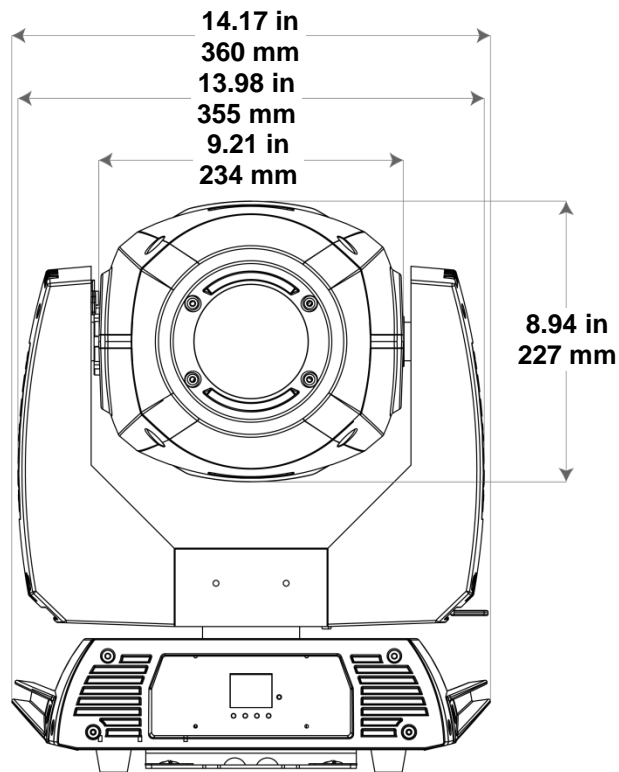

### 3. SETUP

#### AC Power

Each Rogue™ R1 Spot has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Rogue™ R1 Spot, refer to the label affixed to the product. You can also refer to the [Technical Specifications](#) chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the CHAUVET® website: [www.chauvetlighting.com/download/pro](http://www.chauvetlighting.com/download/pro).



**Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.**



**Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.**

#### AC Plug

The Rogue™ R1 Spot comes with a power input cord terminated with a Neutrik® powerCON® A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

#### Fuse Replacement

1. Disconnect this product from the power outlet.
2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse and replace with a another fuse of the same type and rating (F 4 A, 250 V).
4. Screw the fuse holder cap back in place and reconnect power.



**Make sure to disconnect the product's power cord before replacing a blown fuse. Always replace the blown fuse with another of the same type and rating.**

#### Power Linking

The Rogue™ R1 Spot supports power linking. You can power link up to 6 products at 120 V; up to 12 at 208 V; or up to 13 at 230 V.

This product comes with a power input cord. Power linking cables are available from CHAUVET® for purchase.

#### DMX Linking

You can link the Rogue™ R1 Spot to a DMX controller using a 3- or 5-pin DMX connection. If using other DMX-compatible products with the Rogue™ R1 Spot, you can control each individually with a single DMX controller.

#### DMX Personalities

The Rogue™ R1 Spot uses a 3- or 5-pin DMX data connection for the 16- and 19-channel DMX personalities.



- Refer to the [Introduction](#) chapter for a brief description of each DMX personality.
- Refer to the [Operation](#) chapter to learn how to configure the Rogue™ R1 Spot to work in these personalities.
- The [DMX Values](#) section provides you with detailed information regarding the DMX personalities.



**If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the CHAUVET® website: [www.chauvetlighting.com/download/pro](http://www.chauvetlighting.com/download/pro).**


**Gobo Wheel** The Rogue™ R1 Spot includes two gobo wheels: 7 rotating gobos plus open on wheel 1 and 8 fixed gobos plus open on wheel 2. The diagram shows the gobo number on the wheel, as numbered in the [DMX Values](#) tables.

**Gobo Wheel 1**

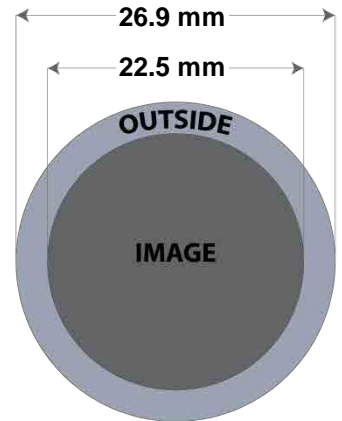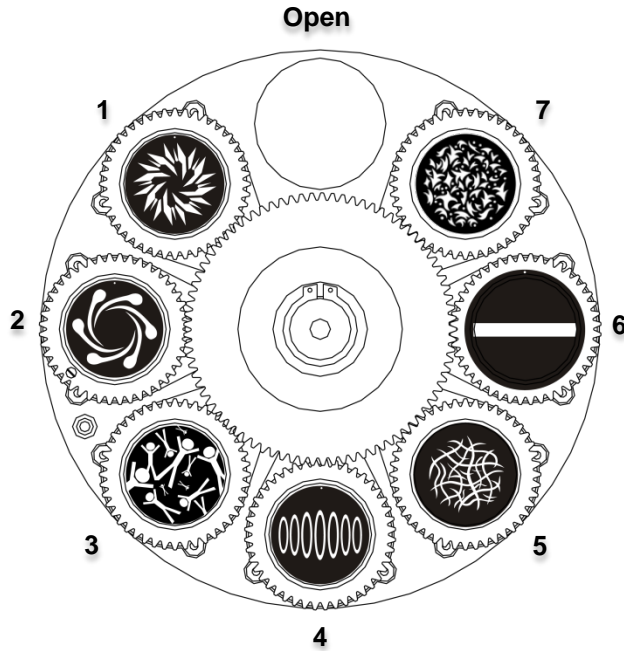


**Gobo Dimensions  
Gobo Wheel 1**

**Gobo Wheel 2**

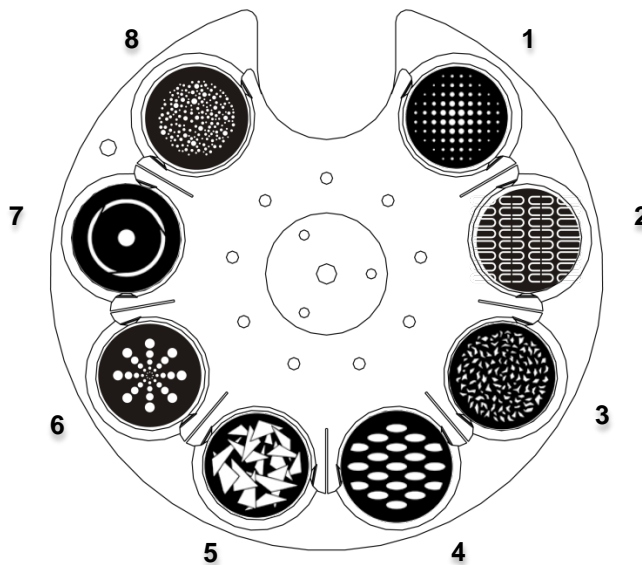

The gobos on Gobo Wheel 2 are not removeable.

**Color Wheel** The Rogue™ R1 Spot includes a color wheel with 8 fixed colors plus open (white) as indicated below. The diagram shows the color names on the wheel, as shown in the [DMX Values](#) tables.

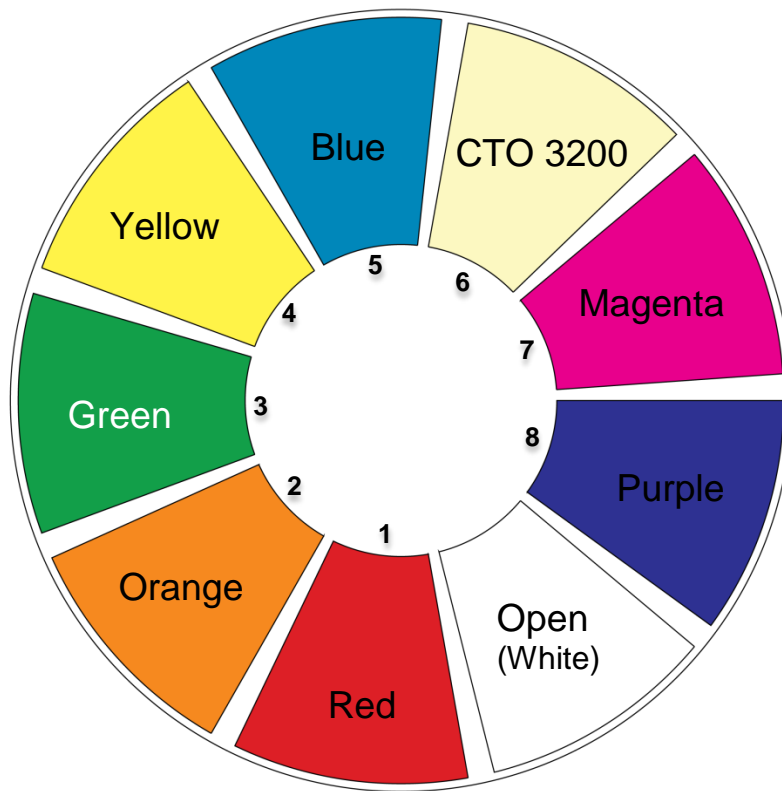

**Mounting** Before mounting this product, read and follow the [Safety Notes](#). For our CHAUVET® line of mounting clamps, go to <http://trusst.com/productcategory/base-plates-accessories-clamps/>.


**Orientation** Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.

**Rigging** CHAUVET® recommends using the following general guidelines when mounting this product.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to mount this product away from any flammable material as indicated in the [Safety Notes](#).
- Never mount in places where rain, high humidity, extreme temperature changes, or restricted ventilation may affect the product.
- If hanging this product, make sure that the mounting location can support the product's weight. See the [Technical Specifications](#) for the weight-bearing requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable (such as **CH-05** from CHAUVET®).

**Procedure** The Rogue™ R1 Spot comes with a preinstalled mounting surface to which you will be able to attach the 2 included omega brackets. Make sure the clamps (such as **CLP-15** from CHAUVET®) are capable of supporting the weight of this product. Use two mounting points per product. In addition, use a safety cable to link the product to the structure.

Mounting Diagram

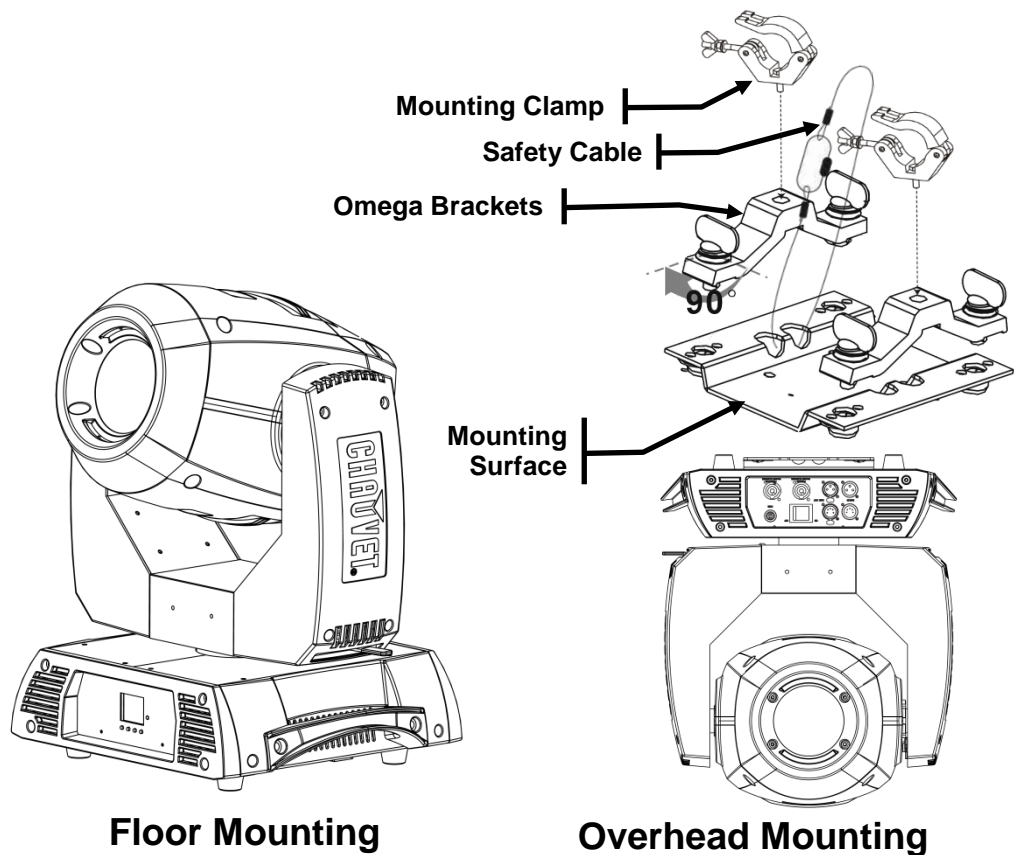

## 4. OPERATION

### Control Panel Description

Button	Function
<MENU>	Exits from the current menu or function
<ENTER>	Enables the currently displayed menu or sets the currently selected value in to the current function
<UP>	Navigates upward through the menu list or increases the numeric value when in a function
<DOWN>	Navigates downward through the menu list or decreases the numeric value when in a function

### Control Options

You can set the Rogue™ R1 Spot starting address in the **001–512** DMX range. This enables control of up to 26 products in the 19-channel **19CH** personality.

### Programming

Refer to the [Menu Map](#) to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To enter programming mode, press any key on the control panel to wake the opening screen. Press <MENU> until you see one of the main level options.
- To highlight a menu option or to change a setting, press <UP> or <DOWN>.
- To change menu levels as shown in the [Menu Map](#), press <ENTER> or <MENU>. This is equivalent to moving right and left of the Menu Map, respectively.
- To accept the current or new value, press <ENTER>.
- To return to the previous menu without making changes, press <MENU>.
- To exit programming mode, press <MENU> until you see one of the main level options, the opening screen, or do not press any button for 30 seconds and the screen will automatically revert to the opening screen.

## Menu Map

Main Level	Programming Levels		Description
Address	001–512		Sets the DMX starting address
Run Mode	DMX	16CH	Selects the DMX mode
		19CH	
	Auto Test		Runs the product's test sequence
	Manual Test	Pan	Allows manual control of all settings from the control panel
		Pan Fine	
		Tilt	
		Tilt Fine	
		P/T Speed	
		Dimmer	
		Dimmer Fine	
		Shutter	
		Color	
		Gobo	
		Gobo Rot	
		Gobo2	
		Focus	
		Prism	
		R-Prism	
		Iris	
		P/T Macro	
		P/T Ma.Speed	
		Special Function	
	000–255		

## Menu Map (Cont.)

Main Level	Programming Levels		Description
Setup	Pan Reverse	YES	Reverse pan operation
		NO	Normal pan operation
	Tilt Reverse	YES	Reverse tilt operation
		NO	Normal tilt operation
	Screen Reverse	YES	Rotates control screen view 180°
		NO	Normal control screen view
	Pan Angle	540	Selects the 540° pan angle range
		360	Selects the 360° pan angle range
		180	Selects the 180° pan angle range
	Tilt Angle	270	Selects the 270° tilt angle range
		180	Selects the 180° tilt angle range
		90	Selects the 90° tilt angle range
	BL.O.P/T Move	YES	Defines the pan/tilt move-in-black delay
		NO	
	BL.O.ColorMove	YES	Defines the color change move-in-black delay
		NO	
	BL.O.GoboMove	YES	Defines the gobo change move-in-black delay
		NO	
	Reset Function	Pan/Tilt	YES
			NO
		Prism	YES
			NO
		Color	YES
			NO
		Gobo&R/ Gobo2	YES
			NO
		Focus/Iris	YES
			NO
		All	YES
			NO
	Factory Settings	YES	Reverts the product back to the original factory settings
		NO	
Sys Info	Ver:		Displays the software version
	Running Mode:		Displays the current running mode
	Dmx Address:		Displays the current DMX address
	Temperature:		Displays the product's temperature in Celsius



**Address** This programming level sets the DMX starting address.

- Starting from the Main Level screen, select **Address**, press **<ENTER>**.

**Set the DMX Address** In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison. This option sets the products DMX address.

- Change the starting address (**001–512**), press **<ENTER>**.

**Run Mode** This programming level sets the DMX personality and controls the different test modes.

- Starting from the Main Level screen, select **Run Mode**, press **<ENTER>**.

**DMX Personality** This option selects which DMX Personality the product uses.

- Highlight **DMX**, press **<ENTER>**.
  - Select the DMX personality **16CH** or **19CH**, press **<ENTER>**.
- See the [DMX Values](#) section for the highest starting address you can select for each personality.
  - Make sure that the starting addresses on the various products do not overlap due to the new personality setting.



**Auto Test** This option runs every attribute individually through 1 cycle.

- Highlight **Auto Test**, press **<ENTER>**.



The Auto Test will end after 1 full cycle. You can stop the test by pressing **<MENU>** at any time.

**Manual Test** This option allows you to run each attribute individually or as a group.

- Highlight **Manual Test**, press **<ENTER>**.
- Highlight the desired attribute listed on the control panel screen, press **<ENTER>**.
  - Set the attribute value (**000–255**), press **<ENTER>**.
- Repeat step 2 for the other attributes.



When exiting the Manual Test level, the values of all tested channels will go back to zero.

- Setup** This programming level controls the product's head movement, lamp adjustments, and maintenance timer.
- Starting from the Main Level screen, select **Setup**, press **<ENTER>**.
- Pan Reverse** Reverses the operation of the pan attribute.
- Highlight **Pan Reverse**, press **<ENTER>**.
  - Select **YES** or **NO**, press **<ENTER>**.
- Tilt Reverse** Reverses the operation of the tilt attribute.
- Highlight **Tilt Reverse**, press **<ENTER>**.
  - Select **YES** or **NO**, press **<ENTER>**.
- Screen Reverse** To invert the control panel screen:
- Highlight **Screen Reverse**, press **<ENTER>**.
  - Select **YES** or **NO**, press **<ENTER>**.
- Pan Angle** This option assigns pan range.
- Highlight **Pan Angle**, press **<ENTER>**.
  - Select **540**, **360**, or **180**, press **<ENTER>**.
- Tilt Angle** This option assigns tilt range.
- Highlight **Tilt Angle**, press **<ENTER>**.
  - Select **90**, **180**, or **270**, press **<ENTER>**.
- Pan and Tilt Movement BlackOut** This option engages the shutter to block all light output whenever the product's head is in motion.
- Highlight **BL.O.P/T Move**, press **<ENTER>**.
  - Select **YES** or **NO**, press **<ENTER>**.
- Color Movement BlackOut** This option engages the shutter to block all light output whenever the product's color wheel is in motion.
- Highlight **BL.O.ColorMove**, press **<ENTER>**.
  - Select **YES** or **NO**, press **<ENTER>**.
- Gobo Movement BlackOut** This option engages the shutter to block all light output whenever the product's gobo wheel is in motion.
- Highlight **BL.O.GoboMove**, press **<ENTER>**.
  - Select **YES** or **NO**, press **<ENTER>**.

- Reset Function** This programming level allows the user to reset individual functions to the home position.
- Starting from the **Setup** screen level, select **Reset Function**, press **<ENTER>**.
- Pan/Tilt Reset** This option resets the Pan/Tilt functions to the home position.
1. Highlight **Pan/Tilt**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.
- Prism Reset** This option resets the Prism functions to the home position.
1. Highlight **Prism**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.
- Color Reset** This option resets the Color functions to the home position.
1. Highlight **Color**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.
- Gobo&R/Gobo2 Reset** This option resets the Gobo&R/Gobo 2 functions to the home position.
1. Highlight **Gobo&R/Gobo2**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.
- Focus/Iris Reset** This option resets the Focus/Iris functions to the home position.
1. Highlight **Focus/Iris**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.
- All Reset** This option resets the all the functions to the home position.
1. Highlight **All**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.
- Factory Reset Function** This reverts the product back to its original factory settings.
1. Starting from the **Setup** screen level, select **Factory Settings**, press **<ENTER>**.
  2. Select **YES** or **NO**, press **<ENTER>**.

- System Information** This programming level shows standard information regarding the product's operating status.
- Starting from the Main Level screen, select **Sys Info**, press **<ENTER>**.
    - **Ver:** The current software version is displayed on the screen.
    - **Running Mode:** The current Running mode is displayed on the screen.
    - **DMX Address:** The current DMX address is displayed on the screen.
    - **Temperature:** The current product temperature is displayed on the screen.
- Offset Mode** The Offset mode provides fine adjustments for the home position of all the moving parts in the optical path as well as the pan and tilt movements. This way, when in their home position, the moving parts do not show any border or reduce the light output.
1. Starting from the Main Level screen, press and hold **<MENU>** until the password screen appears.
  2. Using **<UP>** to increase the number value and **<DOWN>** to move to the next column, enter **2323**, press **<ENTER>**. This brings you into the Zero Adjust menu screen.
- Pan**
1. Highlight **PAN**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Tilt**
1. Highlight **TILT**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Gobo**
1. Highlight **GOBO**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Gobo Rotate**
1. Highlight **GOBO ROT**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Gobo 2**
1. Highlight **GOBO2**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Color 1**
1. Highlight **COLOR1**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Color 2**
1. Highlight **COLOR2**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Prism**
1. Highlight **PRISM**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Focus**
1. Highlight **FOCUS**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Iris**
1. Highlight **IRIS**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Frost**
1. Highlight **FROST**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- Dimmer**
1. Highlight **DIMMER**, press **<ENTER>**.
  2. Select **000–255**, press **<ENTER>**.
- FO. Yellow Edge** Reserved for future use.

## DMX Values

19CH	Channel	Function	Value	Percent/Setting
	1	Pan	000◊ 255	0–100%
	2	Fine Pan	000◊ 255	0–100%
	3	Tilt	000◊ 255	0–100%
	4	Fine Tilt	000◊ 255	0–100%
	5	Pan/Tilt Speed	000◊ 255	0–100%
	6	Dimmer	000◊ 255	0–100%
	7	Fine Dimmer	000◊ 255	0–100%
	8	Shutter	000◊ 003 004◊ 007 008◊ 076 077◊ 145 146◊ 215 216◊ 255	Closed Open Slow to fast Pulse effect from slow to fast Random effect from slow to fast Open
	9	Color Wheel	000◊ 006 007◊ 013 014◊ 020 021◊ 027 028◊ 034 035◊ 041 042◊ 048 049◊ 055 056◊ 063 064◊ 127 128◊ 191 192◊ 255	Open Red Orange Green Yellow Blue CTO 3200 K Magenta Purple Split colors Clockwise color scroll, slow to fast Counter-clockwise color scroll, slow to fast

## DMX Values (Cont.)

19CH (Cont.)	Channel	Function	Value	Percent/Setting
10	Gobo Wheel 1		000◊ 007	Open
			008◊ 015	Gobo 1
			016◊ 023	Gobo 2
			024◊ 031	Gobo 3
			032◊ 039	Gobo 4
			040◊ 047	Gobo 5
			048◊ 055	Gobo 6
			056◊ 063	Gobo 7
			064◊ 119	Gobo shake 1–7, slow to fast
			120◊ 127	Open
			128◊ 191	Clockwise gobo scroll, slow to fast
			192◊ 255	Counter-clockwise gobo scroll, slow to fast
11	Gobo Wheel 1 Rotate		000◊ 063	Gobo index
			064◊ 147	Clockwise rotation, slow to fast
			148◊ 231	Counter-clockwise rotation, slow to fast
			232◊ 255	Boomerang effect, slow to fast
12	Gobo Wheel 2		000◊ 006	Open
			007◊ 013	Gobo 1
			014◊ 020	Gobo 2
			021◊ 027	Gobo 3
			028◊ 034	Gobo 4
			035◊ 041	Gobo 5
			042◊ 048	Gobo 6
			049◊ 055	Gobo 7
			056◊ 063	Gobo 8
			064◊ 120	Gobo shake 1–8, slow to fast
			121◊ 127	Open
			128◊ 191	Clockwise gobo scroll, slow to fast
			192◊ 255	Counter-clockwise gobo scroll, slow to fast
13	Focus		000◊ 255	0–100%
14	Prism		000◊ 004	No function
			005◊ 255	Prism insert
15	Prism Rotate		000◊ 127	Prism index
			128◊ 189	Counter-clockwise rotation, fast to slow
			190◊ 193	Stop
			194◊ 255	Clockwise rotation, slow to fast
16	Iris		000◊ 063	Wide to narrow
			064◊ 127	Iris effect, slow to fast
			128◊ 191	Iris effect, in slow, out fast
			192◊ 255	Iris effect, out slow, in fast

## DMX Values (Cont.)

19CH (Cont.)	Channel	Function	Value	Percent/Setting
			000 007	No function
			008 015	Effect 1
			016 023	Effect 2
			024 031	Effect 3
			032 039	Effect 4
			040 047	Effect 5
			048 055	Effect 6
			056 063	Effect 7
			064 071	Effect 8
			072 079	Effect 9
			080 087	Effect 10
			088 095	Effect 11
			096 103	Effect 12
			104 111	Effect 13
			112 119	Effect 14
			120 127	Effect 15
			128 135	Effect 16
			136 143	Effect 17
			144 151	Effect 18
			152 159	Effect 19
			160 167	Effect 20
			168 175	Effect 21
			176 183	Effect 22
			184 191	Effect 23
			192 199	Effect 24
			200 207	Effect 25
			208 215	Effect 26
			216 223	Effect 27
			224 231	Effect 28
			232 239	Effect 29
			240 247	Effect 30
			248 255	Effect 31
	17	Movement Macros		

## DMX Values (Cont.)

19CH (Cont.)	Channel	Function	Value	Percent/Setting
	18	Movement Macro Speed	000○ 255	0–100%
19	19	Control	000○ 007	No function
			008○ 015	Blackout during pan/tilt (3 sec hold)
			016○ 023	Blackout while color wheel moving (3 sec hold)
			024○ 031	Blackout while gobo wheels moving (3 sec hold)
			032○ 039	Disable pan/tilt blackout (3 sec hold)
			040○ 047	Disable color wheel blackout (3 sec hold)
			048○ 055	Disable gobo wheel blackout (3 sec hold)
			056○ 095	No function
			096○ 103	Pan reset
			104○ 111	Tilt reset
			112○ 119	Color wheel reset
			120○ 127	Gobo wheel reset
			128○ 135	Gobo rotation reset
			136○ 143	Prism reset
			144○ 151	Focus reset
			152○ 159	All reset
			160○ 167	Iris reset
			168○ 239	No function
			240○ 247	Pan/Tilt movement ramp speed, increase on
			248○ 255	Pan/Tilt movement ramp speed, increase off
16CH	Channel	Function	Value	Percent/Setting
	1	Pan	000○ 255	0–100%
	2	Fine Pan	000○ 255	0–100%
	3	Tilt	000○ 255	0–100%
	4	Fine Tilt	000○ 255	0–100%
	5	Pan/Tilt Speed	000○ 255	0–100%
	6	Dimmer	000○ 255	0–100%
	7	Shutter	000○ 003	Closed
			004○ 007	Open
			008○ 076	Slow to fast
			077○ 145	Pulse effect from slow to fast
			146○ 215	Random effect from slow to fast
			216○ 255	Open



## DMX Values (Cont.)

16CH (Cont.)	Channel	Function	Value	Percent/Setting
8	Color Wheel		000◊ 006	Open
			007◊ 013	Red
			014◊ 020	Orange
			021◊ 027	Green
			028◊ 034	Yellow
			035◊ 041	Blue
			042◊ 048	CTO 3200 K
			049◊ 055	Magenta
			056◊ 063	Purple
			064◊ 127	Split colors
			128◊ 191	Clockwise color scroll, slow to fast
			192◊ 255	Counter-clockwise color scroll, slow to fast
9	Gobo Wheel 1		000◊ 007	Open
			008◊ 015	Gobo 1
			016◊ 023	Gobo 2
			024◊ 031	Gobo 3
			032◊ 039	Gobo 4
			040◊ 047	Gobo 5
			048◊ 055	Gobo 6
			056◊ 063	Gobo 7
			064◊ 119	Gobo shake 1–7, slow to fast
			120◊ 127	Open
			128◊ 191	Clockwise gobo scroll, slow to fast
			192◊ 255	Counter-clockwise gobo scroll, slow to fast
10	Gobo Wheel 1 Rotate		000◊ 063	Gobo index
			064◊ 147	Clockwise rotation, slow to fast
			148◊ 231	Counter-clockwise rotation, slow to fast
			232◊ 255	Boomerang effect, slow to fast

## DMX Values (Cont.)

16CH (Cont.)	Channel	Function	Value	Percent/Setting
	11	Gobo Wheel 2	000◊ 006 007◊ 013 014◊ 020 021◊ 027 028◊ 034 035◊ 041 042◊ 048 049◊ 055 056◊ 063 064◊ 120 121◊ 127 128◊ 191 192◊ 255	Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo shake 1–8, slow to fast Open Clockwise gobo scroll, slow to fast Counter-clockwise gobo scroll, slow to fast
	12	Focus	000◊ 255	0–100%
	13	Prism	000◊ 004 005◊ 255	No function Prism insert
	14	Prism Rotate	000◊ 127 128◊ 189 190◊ 193 194◊ 255	Prism index Counter-clockwise rotation, fast to slow Stop Clockwise rotation, slow to fast
	15	Iris	000◊ 063 064◊ 127 128◊ 191 192◊ 255	Wide to narrow Iris effect, slow to fast Iris effect, in slow, out fast Iris effect, out slow, in fast
	16	Control	000◊ 007 008◊ 015 016◊ 023 024◊ 031 032◊ 039 040◊ 047 048◊ 055 056◊ 095 096◊ 103 104◊ 111 112◊ 119 120◊ 127 128◊ 135 136◊ 143 144◊ 151 152◊ 159 160◊ 167 168◊ 239 240◊ 247 248◊ 255	No function Blackout during pan/tilt (3 sec hold) Blackout while color wheel moving (3 sec hold) Blackout while gobo wheels moving (3 sec hold) Disable pan/tilt blackout (3 sec hold) Disable color wheel blackout (3 sec hold) Disable gobo wheel blackout (3 sec hold) No function Pan reset Tilt reset Color wheel reset Gobo wheel reset Gobo rotation reset Prism reset Focus reset All reset Iris reset No function Pan/Tilt movement ramp speed, increase on Pan/Tilt movement ramp speed, increase off

## 5. TECHNICAL INFORMATION

### Product Maintenance

To maintain optimum performance and minimize wear, you should clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
4. Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
5. Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
6. Wipe any dirt or grime to the outside edges of the lens surface.
7. Gently polish the lens surfaces until they are free of haze and lint.



**Always dry the external surfaces thoroughly and carefully after cleaning them.**



**Do not spin the cooling fans while blowing compressed air into them.**

## 6. TECHNICAL SPECIFICATIONS

Dimensions and Weight	Length	Width	Height	Weight
	11.1 in (282 mm)	14.2 in (360 mm)	17.6 in (447 mm)	36 lb (16.3 kg)
<b>Note:</b> Dimensions in inches rounded to the nearest decimal digit.				
Power	Power Supply Type		Range	Voltage Selection
	Switching (internal)		100–240 VAC, 50/60 Hz	Auto-ranging
	Parameter		120 VAC, 60 Hz	230 VAC, 50 Hz
	Consumption		225 W	220 W
	Current		2.0 A	1.0 A
	Power linking current (products)		13.6 A (6 products)	13.6 A (13 products)
	Fuse		F 4 A, 250 V	F 4 A, 250 V
	Power I/O		U.S./Canada	Worldwide
	Power input connector		Neutrik® powerCON® A	Neutrik® powerCON® A
	Power cord plug		Edison (U.S.)	Local plug
Light Source	Type	Power		Lifespan
	LED	140 W		50,000 hours
Photo Optic	Parameter		Standard Optics	
	Illuminance @ 5 m		2,619 lux	
	Beam angle		16.5°	
Gobo Dimensions	Gobo Wheel 1 Outside Diameter		Image Diameter	Max. Thickness
	26.9 mm		22.5 mm	0.8 mm
Thermal	Max. External Temperature		Cooling System	
	113 °F (45 °C)		Fan-Cooled	
DMX	I/O Connectors		Connector Type	Channel Range
	3- and 5-pin XLR		Sockets	16 or 19
Ordering	Product Name		Item Code	UPC Number
	Rogue™ R1 Spot		08010828	781462211769
	Rogue™ R1 Spot x2		08010878	781462212261



UL 1573  
CSA C22.2 No. 166  
E113093

**Returns** You must send the product prepaid, in the original box, and with the original packing and accessories. CHAUVET® will not issue call tags. Call CHAUVET® and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return. Clearly label the package with an RMA number. CHAUVET® will refuse any product returned without an RMA number.



**DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.**

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing is recommended.



**CHAUVET® reserves the right to use its own discretion to repair or replace returned product(s).**

## CONTACT Us

### WORLD HEADQUARTERS - CHAUVET®

#### General Information

Address: 5200 NW 108<sup>th</sup> Avenue  
Sunrise, FL 33351  
Voice: (954) 577-4455  
Fax: (954) 929-5560  
Toll free: (800) 762-1084

#### Technical Support

Voice: (954) 577-4455 (Press 4)  
Fax: (954) 756-8015  
Email: [tech@chauvetlighting.com](mailto:tech@chauvetlighting.com)

#### World Wide Web

[www.chauvetlighting.com](http://www.chauvetlighting.com)

### UNITED KINGDOM AND IRELAND - CHAUVET® Europe Ltd.

#### General Information

Address: Unit 1C  
Brookhill Road Industrial Estate  
Pinxton, Nottingham, UK  
NG16 6NT  
Voice: +44 (0)1773 511115  
Fax: +44 (0)1773 511110

#### Technical Support

Email: [uktech@chauvetlighting.com](mailto:uktech@chauvetlighting.com)

#### World Wide Web

[www.chauvetlighting.co.uk](http://www.chauvetlighting.co.uk)

### MEXICO - CHAUVET® Mexico

#### General Information

Address: Av. Santa Ana 30  
Parque Industrial Lerma  
Lerma, Mexico C.P. 52000  
Voice: +52 (728) 285-5000

#### Technical Support

Email: [servicio@chauvet.com.mx](mailto:servicio@chauvet.com.mx)

#### World Wide Web

[www.chauvet.com.mx](http://www.chauvet.com.mx)

Outside the U.S., United Kingdom, Ireland, or Mexico, contact your dealer. Follow their instructions to request support or to return a product. Visit our website for contact details.